


PRD EASYSTART TIMING CHART

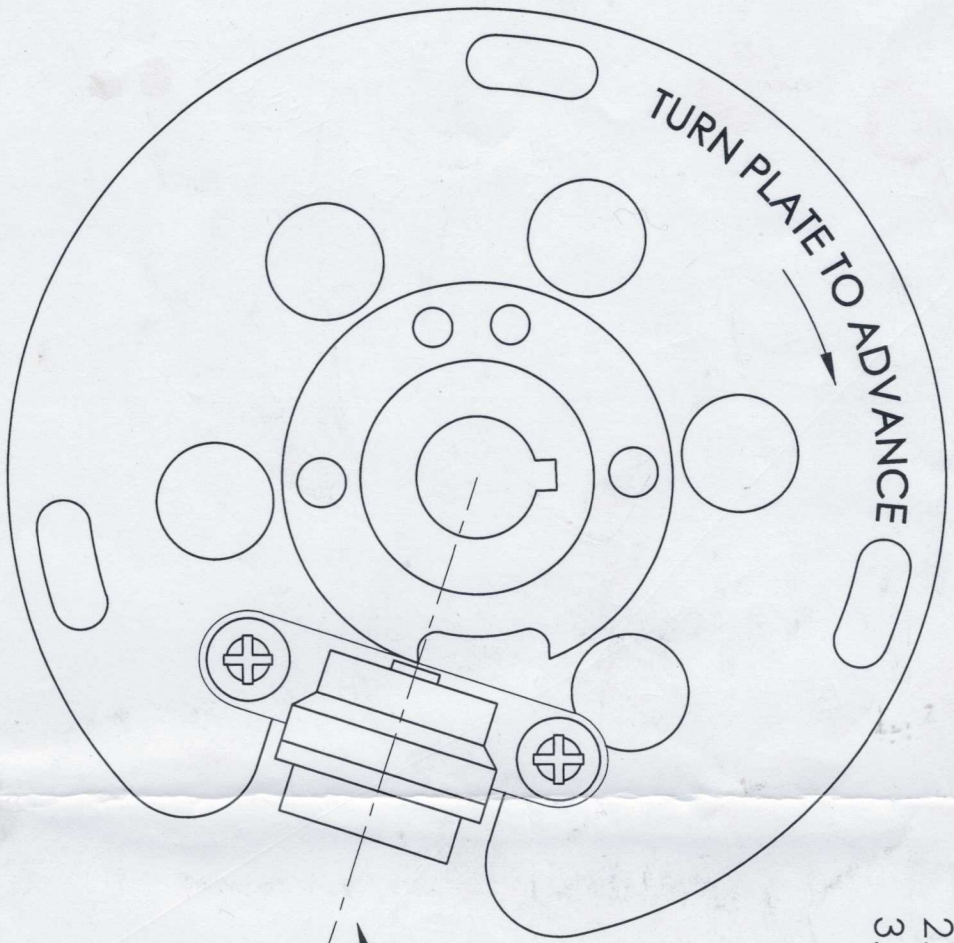

1. SET PISTON AT TOP DEAD CENTRE
2. SET IGNITION PLATE AS DRAWING
3. TURN PLATE CLOCKWISE TO ADVANCE

STD SETTING 22°